



A21




APU[®]

PLASTER JOINT PROFILES FOR INTERIOR AND EXTERIOR PLASTERING

Corner bead

DUO

For thin-level plasters
or fabric wallpaper

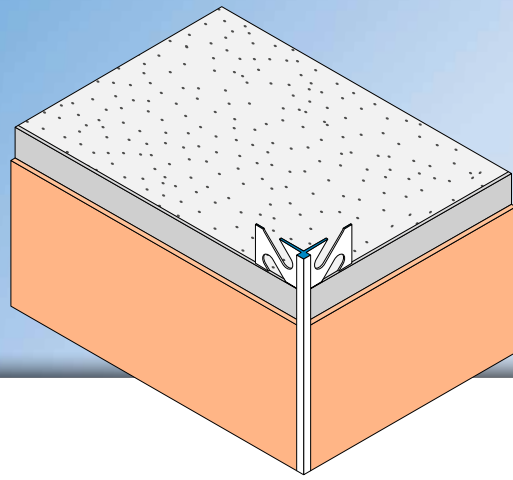

The **APU corner bead DUO** is used in interior and exterior plaster systems for forming a flush, exact plaster edge.

The profile has a reinforced, visible edge in the corner area. The plaster bars come in different versions: with holes (A21-2000 for thin layers of plaster), or with no holes (A21-2050 for fabric wallpaper).



A21



Fitting

- ① Using trimming shears with supporting surface, cut corner bracket to the desired size.
- ② Fully embed the corner bracket with bonding mortar, creating a flush finish.
- ③ Apply covering layer of plaster or put up fabric wallpaper (A21-2050).